

HOW TO CHANGE A FLAT TIRE

1

First make sure you find a safe spot off of the road that doesn't put you at risk



2

Put your hazard lights on, and make sure the parking brake is activated



3

Apply the wheel wedges, remove the hubcap, and loosen the lug nuts



4

Place the jack under the car and raise the vehicle



5

At this point, you'll need to unscrew the lug nuts so you can remove the flat tire



6

From here, mount the spare tire and tighten the lug nuts



7

Lower the vehicle partially and re-tighten the lug nuts before lowering the vehicle

